

DAILY SANITIZING/DISINFECTING OF YOUR MATT85™ HARDWARE







1. Use a 70% isopropyl alcohol wipe or spray a disinfectant or surface sanitizer onto a clean microfiber cloth. Wipe all hard surfaces of your Matt85 printer and tablet. This includes the tablet screen and the outer case of the equipment. Follow all stated instructions on the product being used.



2. You may also use an alcohol wipe to clean the print mechanism of the printer.

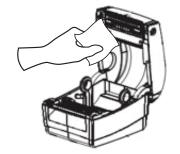

3. You may sanitize the Matt85 Tablet cover by removing the cover from the tablet and washing it in the dishwasher. Thoroughly dry the tablet cover prior to placing it back on your tablet.



CAUTION

- Avoid abrasive cleaning cloths; Do NOT use bleach.
- Keep liquids away from the product.
- Don't get moisture into any openings; Do not submerge your electronic Matt85 product in any cleaning agents.
- Don't use aerosol sprays, bleaches, or abrasives.
- Don't spray cleaners directly onto the item.





